


R7m and R9 Receiver

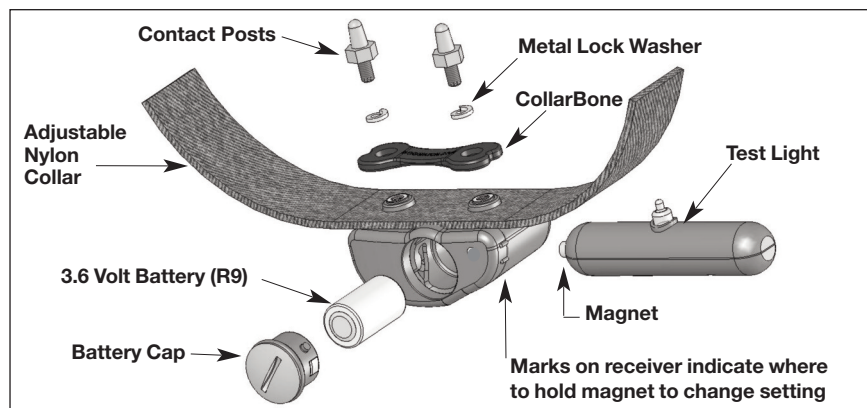

The components of both the R9 (above) and the R7m are the same except the R7m is smaller and uses a different battery.

Receiver Battery

Both the R7m and the R9 operate on a replaceable battery. Both receivers are waterproof when the battery cap is fully seated.

R9 Battery: The R9 receiver is powered by a 3.6 volt lithium battery. With normal use, the battery should last about **two years**. The positive (+) end of the battery must be inserted down.

R7m Battery: The R7m receiver is powered by a 3 volt (1/3 N) lithium battery. With normal use, the battery should last about **six months**. The negative (-) end of the battery must be inserted down.



Insert battery **POSITIVE** end down.



Insert battery **NEGATIVE** end down.

Resetting the Battery Status Light

1. Remove the old battery.
2. Let the receiver sit for five minutes before inserting a **new** battery.
3. Insert a **new** battery.

If you forget to wait prior to inserting a new battery, the flashing red battery status light will continue to flash for 24 hours before automatically resetting.

Battery Plans: Ask your DogWatch Dealer about a battery plan. If your Dealer does not offer a battery plan, you can join the DogWatch Battery Program, where a new battery is mailed to you every 6 or 24 months, depending on the type of receiver you own. Call DogWatch at 800-793-3436 or join through the website at www.dogwatch.com.

R7m and R9 Receiver Features

AutoMemory™ When the receiver is set to one of the AutoMemory levels, our patented AutoMemory feature automatically adjusts the correction level of the receiver when your pet challenges the boundary by entering the avoidance zone. When this happens, the receiver will automatically advance the correction level setting by one level. If the dog does not enter the signal field again in the next 24-hour period, the receiver defaults to the original setting. The AutoMemory feature operates when your Receiver Training Level is set to 4, 5, or 6.

Status Light

- **Start-Up** When you first insert the battery into your receiver, the status light will flash red and green. This indicates that the receiver has started properly. Once started, the status light will continue to flash green once every 30 seconds indicating normal operation. In the event that the light does not flash, check the battery to be sure that it has been inserted properly.
- **Training Level Indicator** When programming the training level of your receiver, the status light will flash green in conjunction with audible beeps. The number of flashes will equal the training level you have chosen.
- **Signal Field Indicator** When testing the receiver in the signal field the status light will flash green when the receiver is in the audible zone and will flash green and red when the receiver is in the correction zone.
- **Correction Alert** You will be able to tell if your pet has tested the boundary by looking at the status light. The status light will double flash green every 30 seconds during the 24-hour period after the dog has entered the boundary area.
- **Battery Indicator** This feature monitors the voltage level of the battery. Once the receiver detects that the battery has reached a low voltage level, the status light will change from the normal blinking “green” every 30 seconds to blinking “red” every 10 seconds. This indicates that your battery is close to the end of its useful life and you should change the battery within the next 3-4 days.


SETTING THE RECEIVER

Receiver Training Levels Your receiver provides eight training levels that allow you to customize the training setting to your dog’s individual needs: Audible Only, Level 1 (extra low), Level 2 (low), Level 3 (low medium), Level 4 (medium), Level 5 (medium high), Level 6 (high), and Level 7 (extra high). When the receiver is first shipped from the manufacturer, it will automatically be set to Training Level 2 (low).

Changing the Receiver Settings If you need to change the Training Level on the receiver, hold your test light magnet to the marked area on the side of the receiver. Hold the magnet steady and you will hear a series of beeps that indicate the current training level. The “Audible Only” level is one long beep, Level 1 is one short beep, Level 2 is two short beeps, Level 3 is three short beeps, etc. The Training Level will continue to advance while the magnet is held in position. When you reach the desired setting, pull the magnet away from the receiver. The receiver is now set.



Using the magnet to reset the R7m.

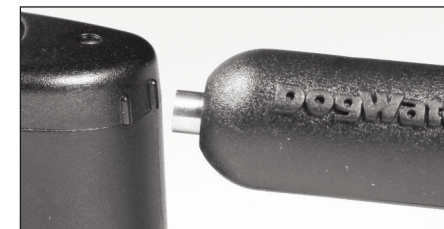

Using the magnet to reset the R9.

Note: Any time the magnet activates the receiver, the number of beeps will indicate the current receiver level. As long as the magnet is held in place, it will advance the receiver to the next training level and continue to cycle through the settings in the order shown in the chart below.

PROGRAMMABLE FEATURES

Using the RATE and TRAINING MODE settings on your DogWatch transmitter in conjunction with the TRAINING LEVELS on your receiver, you can customize the receiver to one of 20 training settings, as outlined in the chart below.

TRANSMITTER SETTINGS

Rates The Transmitter Rate switch adjusts to three settings: (1 = slow, 2 = medium, 3 = fast). Increasing the rate means that he will receive a greater number of pulses per second. Rate 1 is the slowest pulse rate per second; 3 is the fastest.

Training Modes The Training Mode switch allows you to choose between two training options: Basic (Mode A) and QuickAlert™ (Mode B). In Mode A, there is an audible before a correction. For harder to train dogs, Mode B delivers a very quick “alert” correction before the normal audible warning and correction.

Receiver Levels and Transmitter Settings

TRANSMITTER MODE AND RATE SETTINGS

Mode A Rate 1	Mode A Rate 2	Mode A Rate 3	Mode B QuickAlert™
Transmitter Rate Fixed at Medium			
Slow	Medium	Fast	Slow
Slow	Medium	Fast	Medium
Slow	Medium	Fast	Fast
Fast			Fast
X-Fast			X-Fast
XX-Fast			XX-Fast
Audible and XXX Fast Correction are Simultaneous			

} **AutoMemory™**
self activates
and advances
to the next level.

For example: If the receiver is on Level 1 and the transmitter is on Rate 1, your dog will receive the lowest level of correction and the least number of pulses per second.

Please remember that if your Receiver Level is set to 1, 2, or 3 and you switch the Training Mode to QuickAlert (Mode B), your training setting may change. For example, if the receiver is set to Level 3 and the transmitter is set to Rate 1, your dog will receive a slow correction. If you switch your Training Mode to QuickAlert, your dog will now receive a fast correction.

*** IMPORTANT ***

Never change the receiver Training Levels when your dog is wearing the collar.

DogWatch®

Hidden Fences

R7m and R9 Receivers Operating Instructions



For Use With

Performance Series Systems